


AUDIO SYSTEM



COMPONENTS E410C937E

 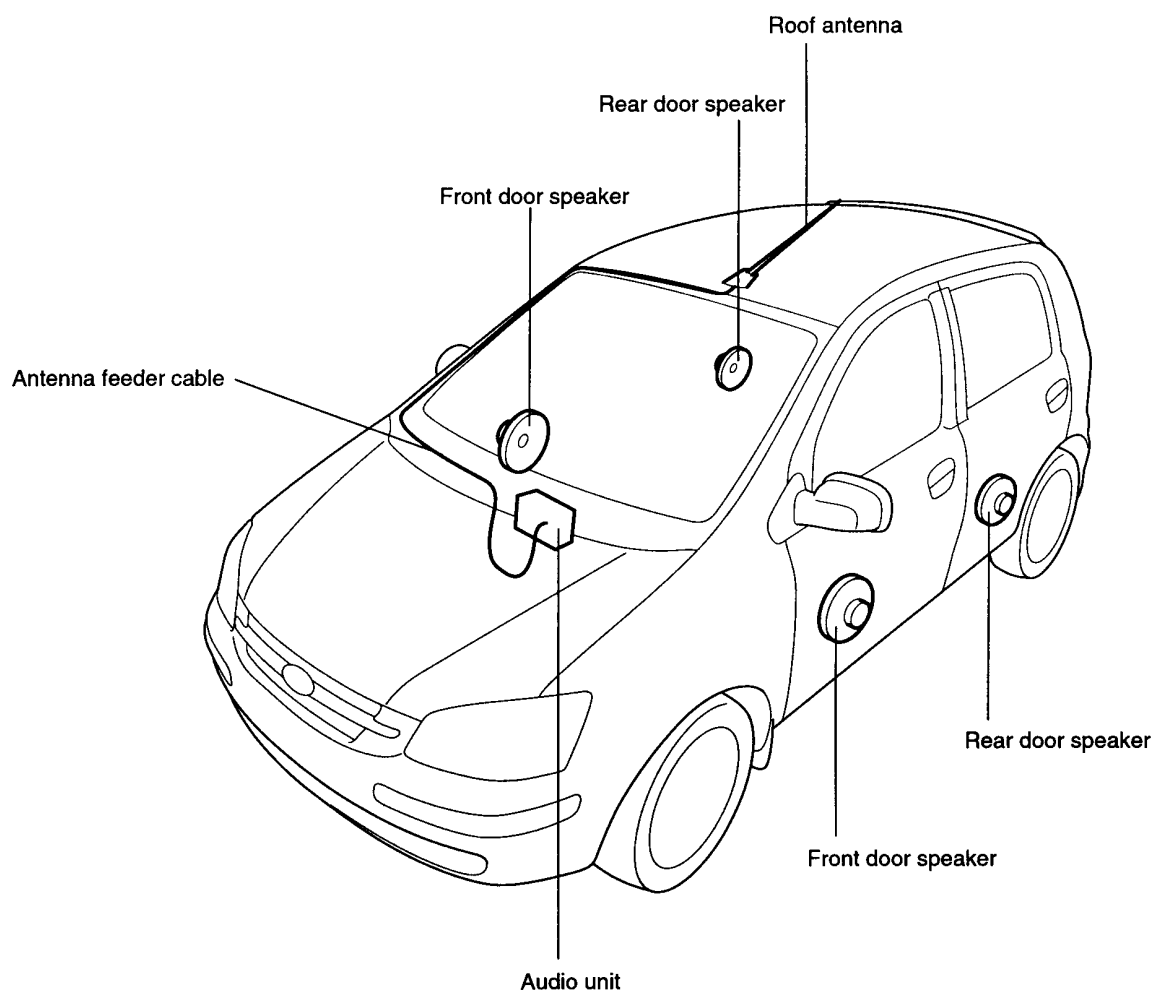


AUDIO UNIT



COMPONENTS E4D85F1


[K210]

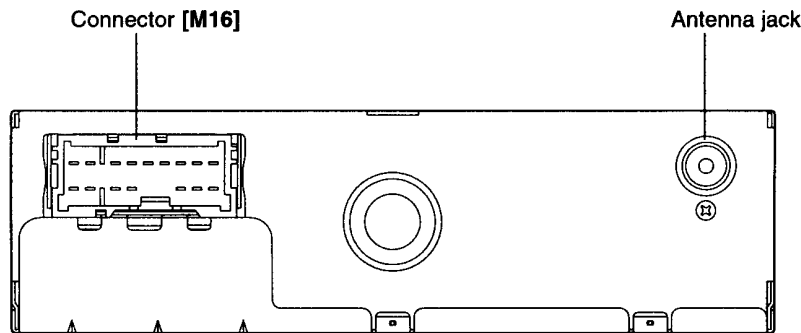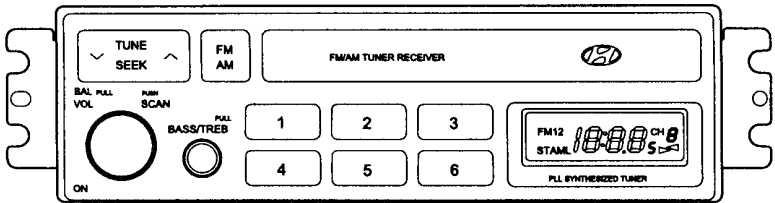


Connector [M16]	Terminal	Description
 <p>[M16]</p> <p>ETJA001C</p>	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)

[K220]

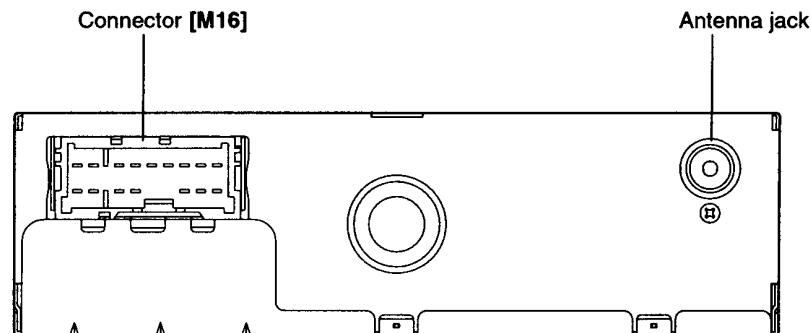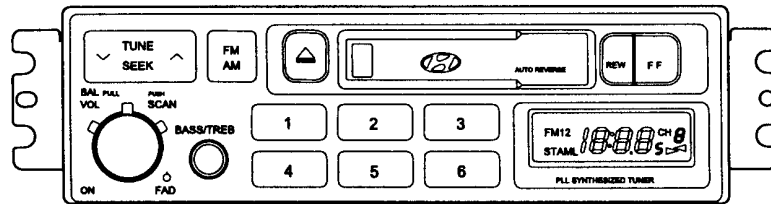


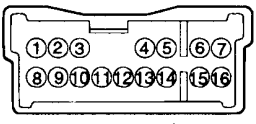Connector [M16]	Terminal	Description
 <p>[M16]</p> <p>ETJA001C</p>	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)


[H280]

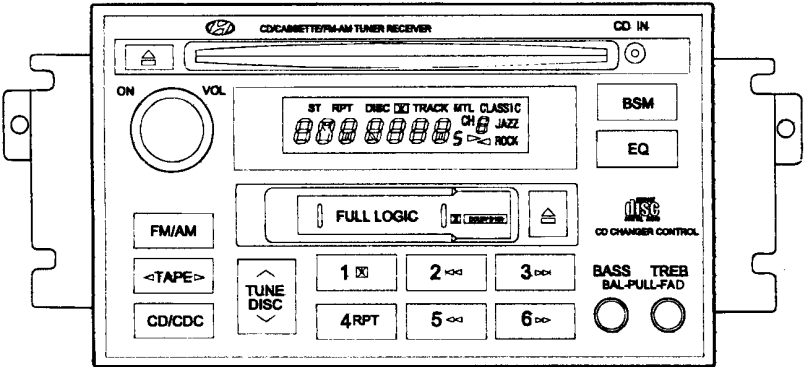



KTMB001M

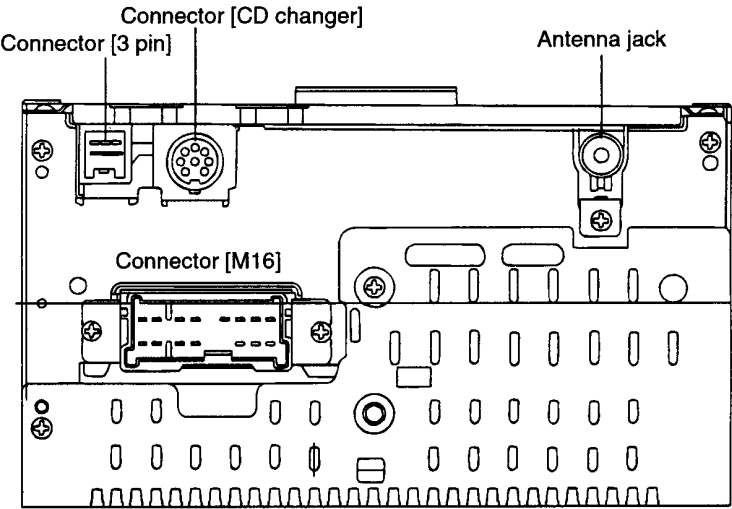

KTMB001L

 Connector[M16]	Terminal	Description
 [M16] ETJA001C	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	Voice ON
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)

 
Connector [3pin]	Terminal	Description
 ETHA005F	1	Ground
	2	Signal
	3	Ground

Connector	Terminal	Description
(CD Changer) 	1	R
	2	CD ON
	3	BUS
	4	B+
	5	M. Ground
	6	N.C.
	7	L
	8	A.Ground

REMOVAL AND INSTALLATION


E4F8868A0

1. Disconnect the negative (-) battery terminal.
2. Remove the 2 screws and 2 bolts holding the driver's crash pad lower panel.

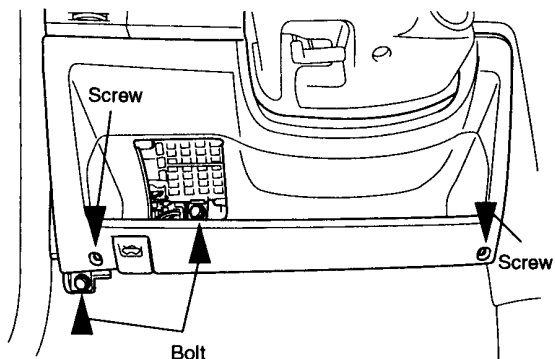


ETPD062E

3. Disconnect the hood release cable and the data link connector from the beneath driver's crash pad lower panel.

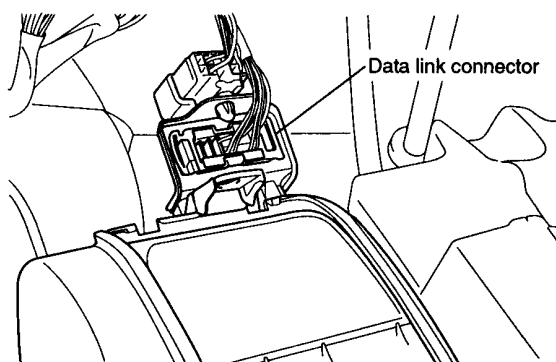


ETPD062B

4. Remove the glove box.
5. Disconnect the intake control mode, mode control and air mix control cable.
6. Detach the clips and disconnect the wire connectors then carefully remove the center facia panel with a flat-tip screwdriver.

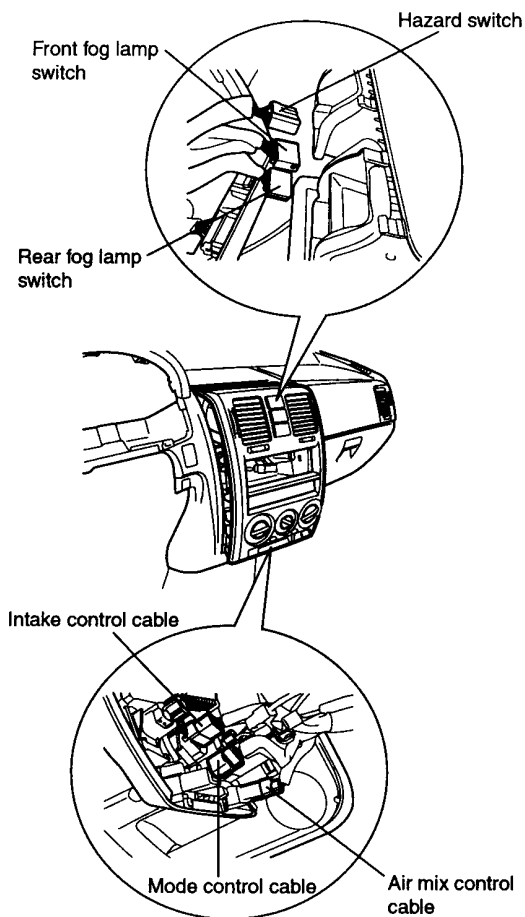

ETPD062D

7. Remove the 4 screws holding the audio unit and disconnect the wire connector then remove the audio unit.

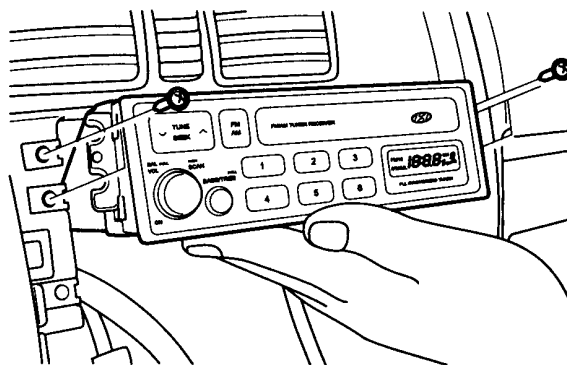

KTPC062A

8. Installation is the reverse of removal.