



DISASSEMBLY

1. Remove the main console.
2. Remove the cable adjuster, pin, equalizer and nut holder.

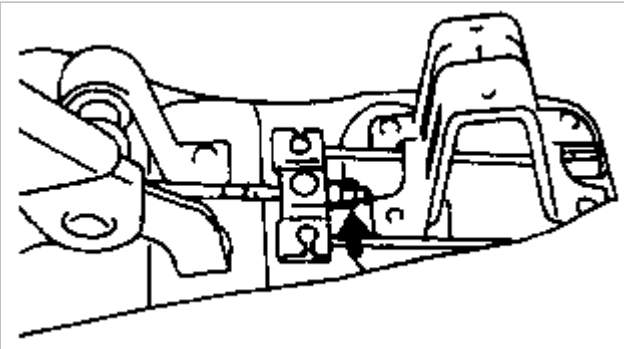

3. Detach the parking brake switch.
4. Remove the parking brake lever.
5. Remove the rear seat cushion and take up the carpet.
6. Remove the parking brake cable clamp and grommet.

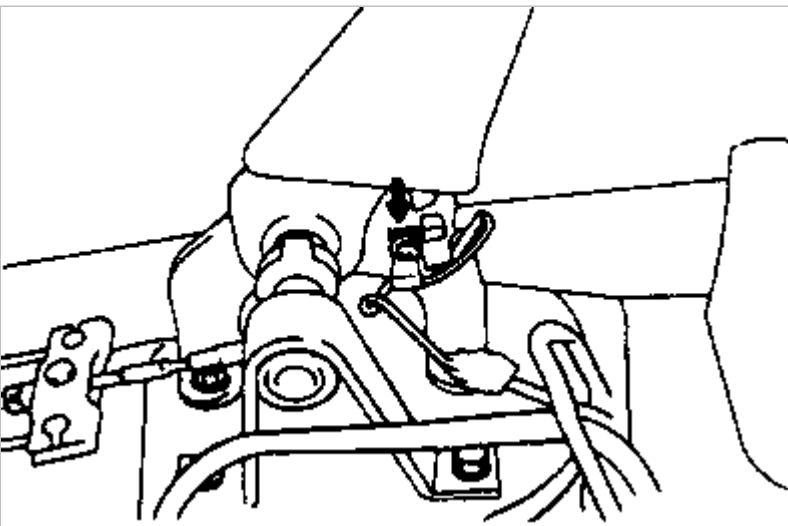

7. Remove the tire assembly and the brake drum.
8. Remove the rear hub assembly.
9. Remove the springs and shoe hold down pins.
10. Remove the cable clip.
11. Disconnect the cable end from the trailing shoe.
12. Drive out the parking brake cable to the under body side.

