



DISASSEMBLY


1. Remove the caliper mounting bolts, and remove the caliper assy.

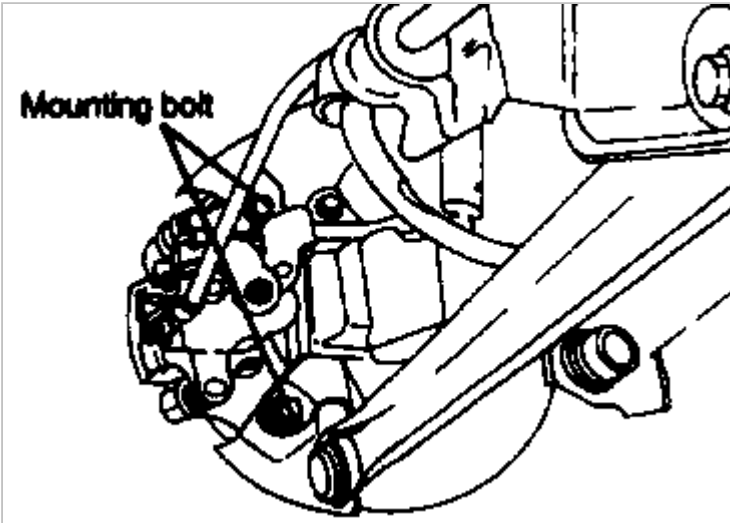

2. Remove the carrier bolt, and remove the carrier with brake pad.

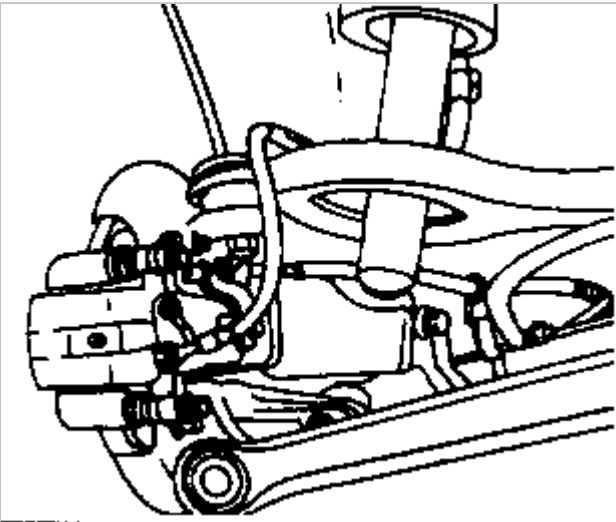

3. Remove the piston boot.
4. Remove the piston assembly with special tool to twist the piston out of the caliper body.

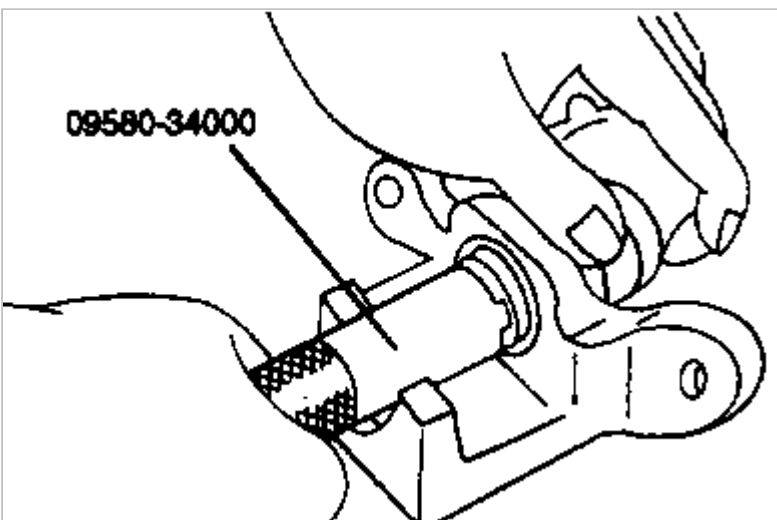

5. Remove piston seal with fingertip.

Do not use sharpened tools to prevent damage to inner cylinder.

