

,

INSTALLATION

Before replacing the brake pads, remove brake fluid from the master cylinder reservoir until it is half full.