



REMOVAL

1. Remove the wheel.
2. Remove the screw that holds the trailing shoe key onto the anchor plate.
3. Release the parking cable adjusting nut.
4. Remove the parking cable.
5. Remove the brake fluid hose.
6. Remove the caliper assembly.
Support the caliper with a wire or some other means to prevent damage to the brake hose.

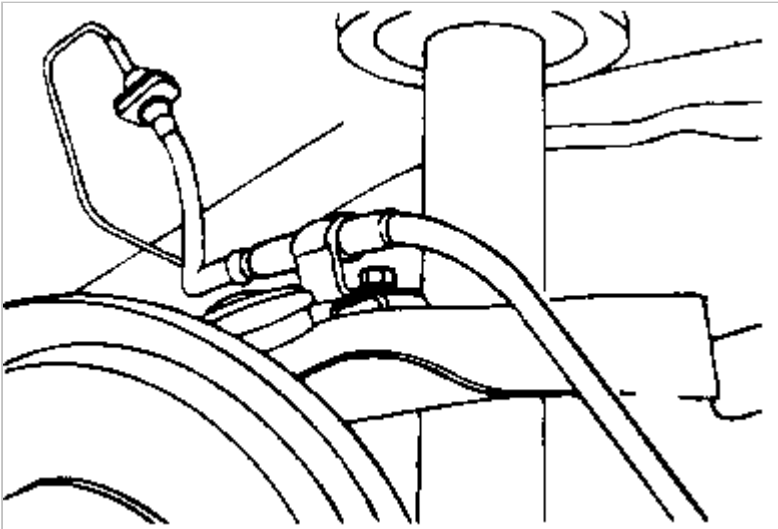

7. Remove the ABS wheel speed sensor.

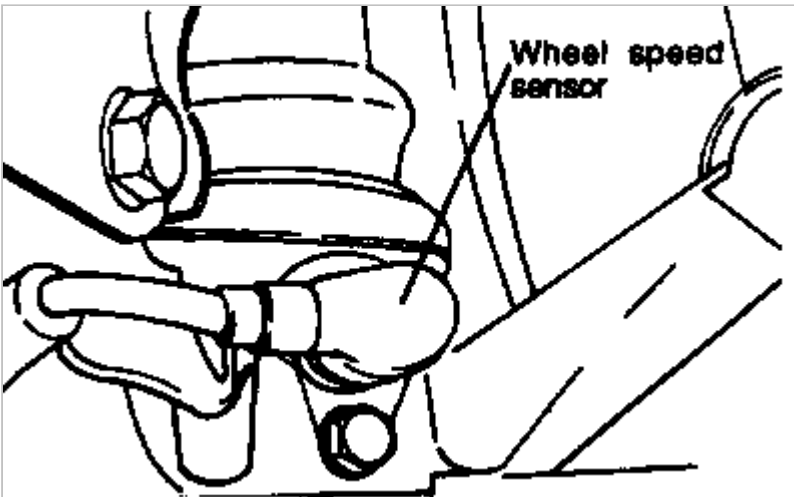

8. Remove the wheel bearing nut.
9. Remove the wheel hub and dust cover.