


INSPECTION

DOOR LOCK ACTUATOR INSPECTION

1. Remove the door trim panel.
2. Disconnect the 6P connector from the actuator.

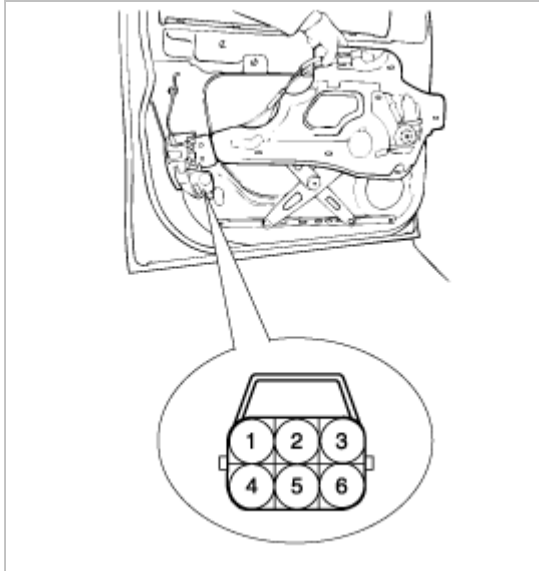

3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Terminal		4	6	2	3
Position	Lock	⊖	⊕		
	Unlock	⊕	⊖		
Front right [D16]	Lock	⊕	⊖		
	Unlock	⊖	⊕		
Rear left [D25]	Lock			⊕	⊖
	Unlock			⊖	⊕
Rear right [D26]	Lock			⊖	⊕
	Unlock			⊕	⊖

DOOR LOCK SWITCH INSPECTION

1. Remove the door trim panel.
2. Disconnect the 6P connector from the actuator.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal		1	2	3	4	5	6
Position	Lock	○ — ○					
	Unlock	○ — ○					
Front right [D16]	Lock	○ — ○					
	Unlock		○ — ○				
Rear left [D25]	Lock					○ — ○	
	Unlock				○ — ○		
Rear right [D26]	Lock				○ — ○		
	Unlock					○ — ○	