



REASSEMBLY


1. Check the parking brake cables for left and right identification marks and install accordingly.

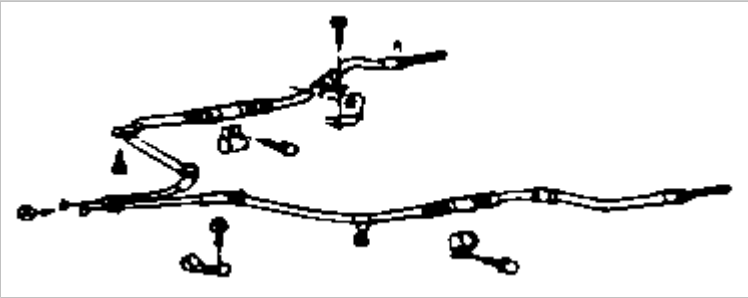

2. Move the adjuster lever all the way back when installing the shoe-to-shoe spring.

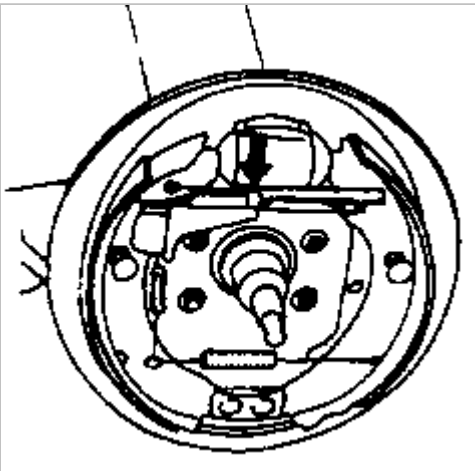

3. Install the grommets in the direction shown in the illustration.

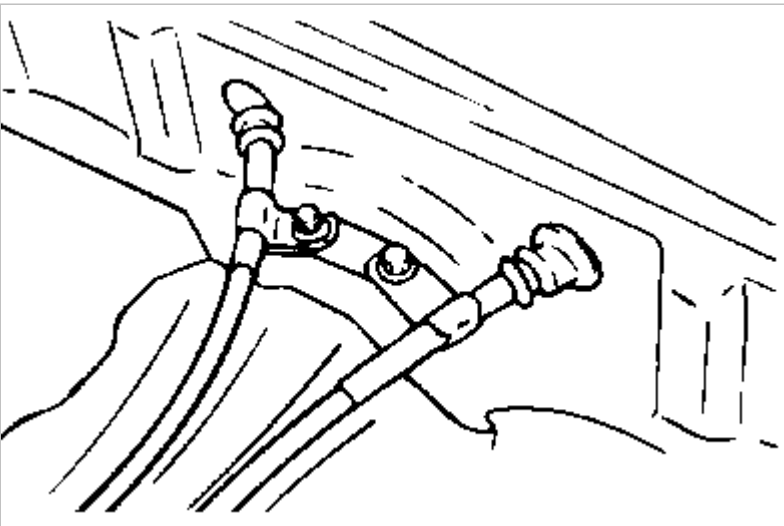

4. Apply a coating of the specified grease to the sliding parts of the ratchet plate and ratchet pawl.
5. After installing the cable adjuster, adjust the parking brake lever stroke.

