


CIRCUIT DIAGRAM

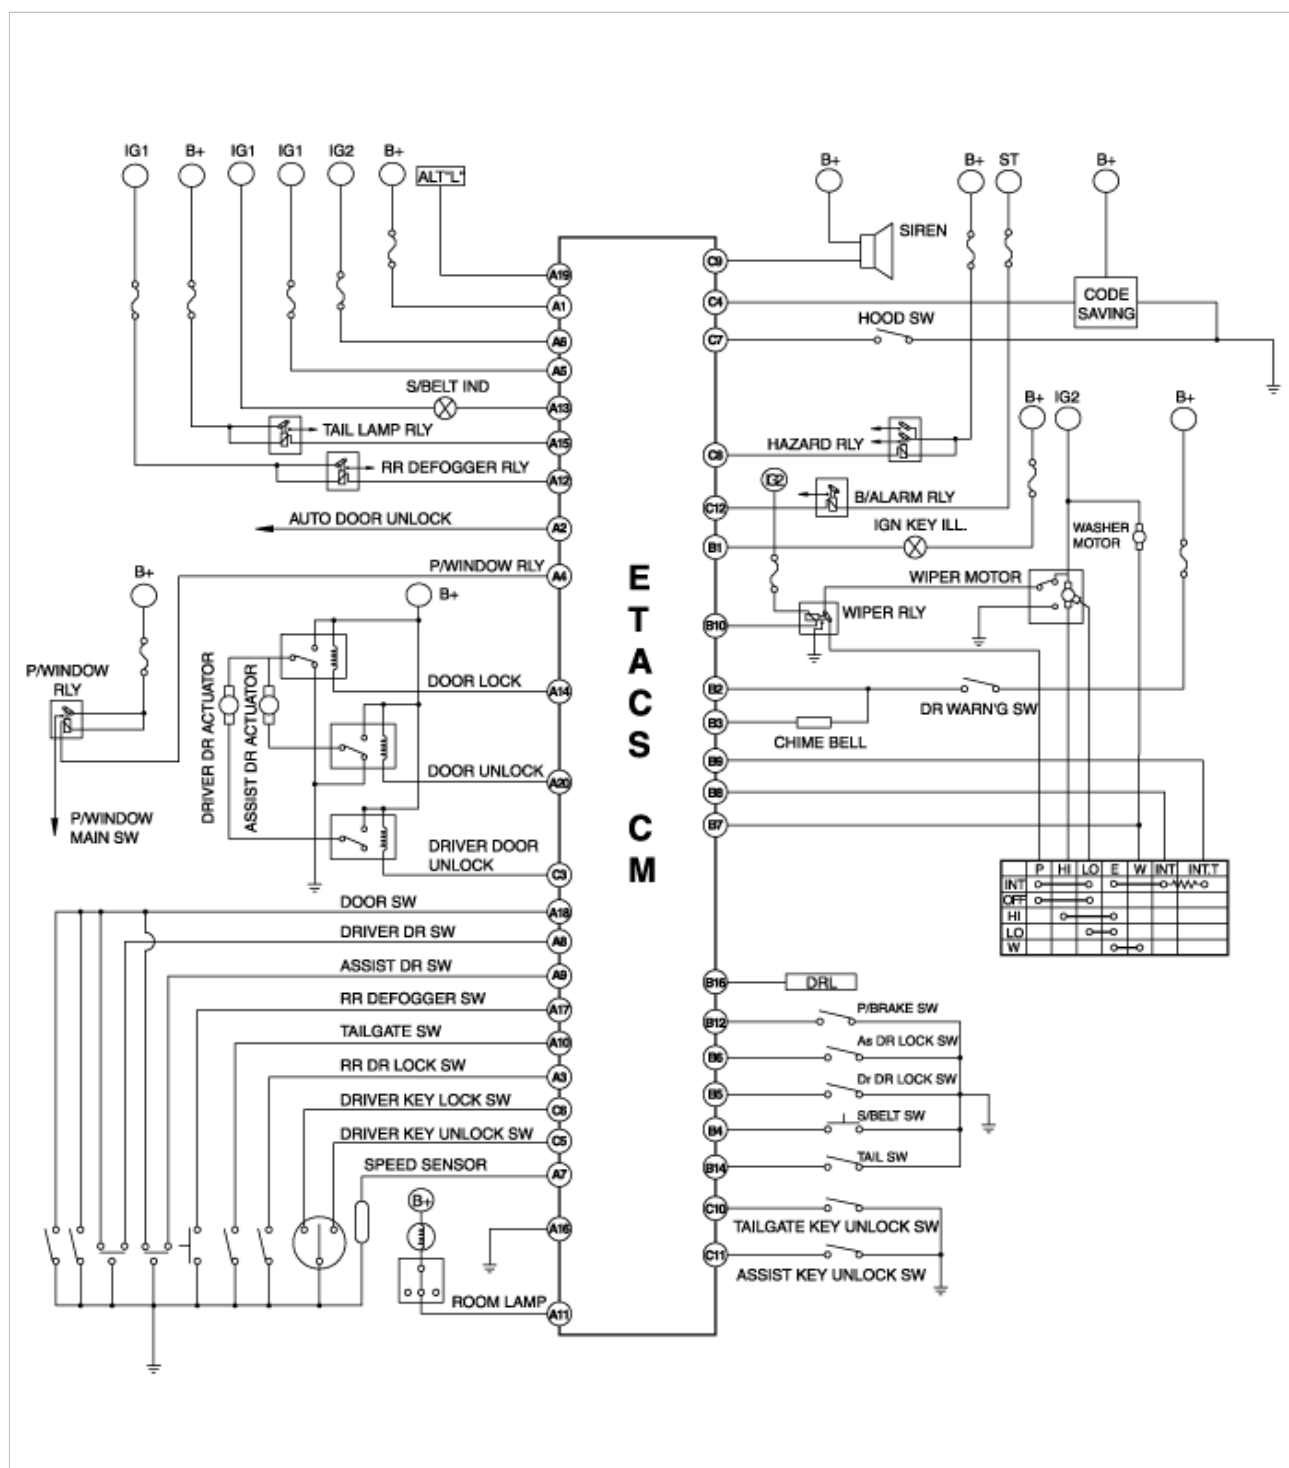

ETACS CM PIN CONNECTION

[M13-3]

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

Connector A**[M13-2]**

1	2	3	4	5	6	1	2	3	4	5	6	7	8
7	8	9	10	11	12	9	10	11	12	13	14	15	16

Connector C**[M13-1]****Connector B**

Terminal No.	Connector A	Connector B	Connector C
1	Battery(+)	Ignition key illumination	-
2	Auto door unlock	Door warning switch	-
3	Rear door lock switch	Chime bell	Driver door unlock relay
4	Power window relay	Seat belt switch	* Code saving
5	IGN1	Driver door lock switch	Driver key unlock switch
6	IGN2	Assist door lock switch	Driver key lock switch
7	Speed sensor	Washer switch	* Hood switch
8	Driver door switch	INT switch	* Hazard relay
9	Assist door switch	INT(T) volume	* Siren
10	Tailgate switch	Wiper relay	* Tailgate key unlock switch
11	Room lamp	-	* Assist key unlock switch
12	Rear defogger relay	Parking brake switch	* Burglar alarm relay
13	Seat belt indicator	-	
14	Door lock relay	Tail lamp switch	
15	Tail lamp relay	-	
16	Ground	DRL	
17	Rear defogger switch		
18	Door switch		
19	Alternator(L)		
20	Door unlock relay		

NOTE

* : only equipped with keyless entry system.